



IPL, Flymo 1200R, 2013-06, 581 84 66-01

FLYMO[®] Robotic Lawn Mower 1200R

2013

Spare parts

Ersatzteile



Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

A FLYMO 1200R COVER

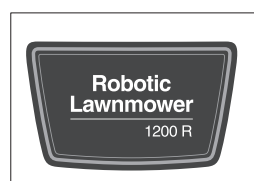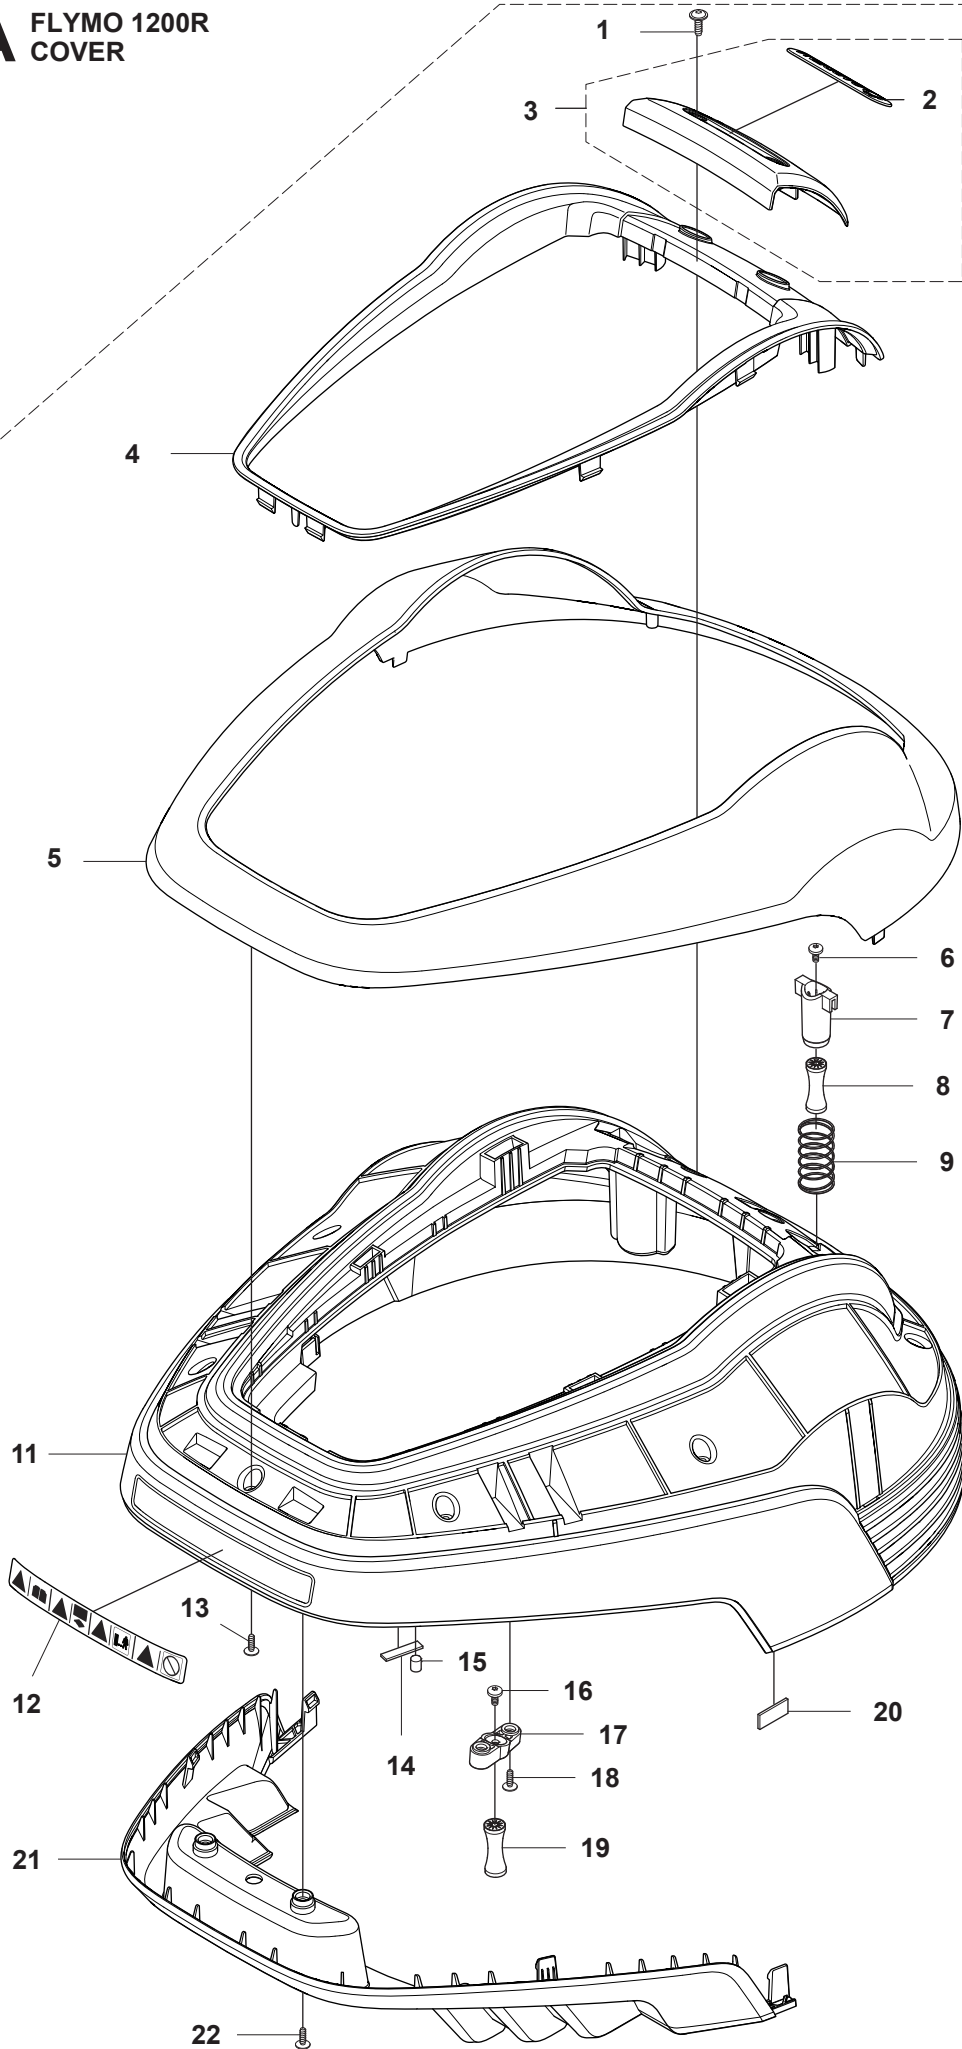


10

23

PAGE A FLYMO 1200R COVER

Position	Article	Quantity	Notes	Kit
1	575 54 33-14	2	Screw, grey (14mm)	
2	581 61 68-01	1	Decal, Flymo logotype	3
3	579 39 21-04	1	Logo, plate kit incl. Logo	
4	577 70 76-02	1	Frame	
5	577 70 73-02	1	Cover	
6	576 21 39-01	2	Screw M5x12	
7	574 46 90-02	2	Bracket, lift sensor	
8	574 46 91-02	2	Rubber damper	
9	574 48 51-02	2	Spring, lift sensor	
10	581 61 69-01	1	Decal, 1200R	
11	579 39 17-01	1	Main body	
12	577 88 06-02	1	Warning label	11
13	575 54 33-14	7	Screw, grey (14mm)	
14	576 03 01-01	1	Plate, collision sensor	11
15	576 18 33-01	1	Magnet, collision sensor	11
16	576 21 39-01	2	Screw M5x12	
17	575 41 60-02	2	Support clamp	
18	575 54 33-14	4	Screw, grey (14mm)	
19	574 46 91-02	2	Rubber damper	
20	576 18 32-01	1	Magnet, lift sensor	11
21	577 70 65-01	1	Bumper, rear	
22	575 54 33-14	2	Screw, grey (14mm)	
23	577 95 53-06	1	Cover Kit, Complete excl. Model decal	


B FLYMO 1200R CHASSIS UPPER

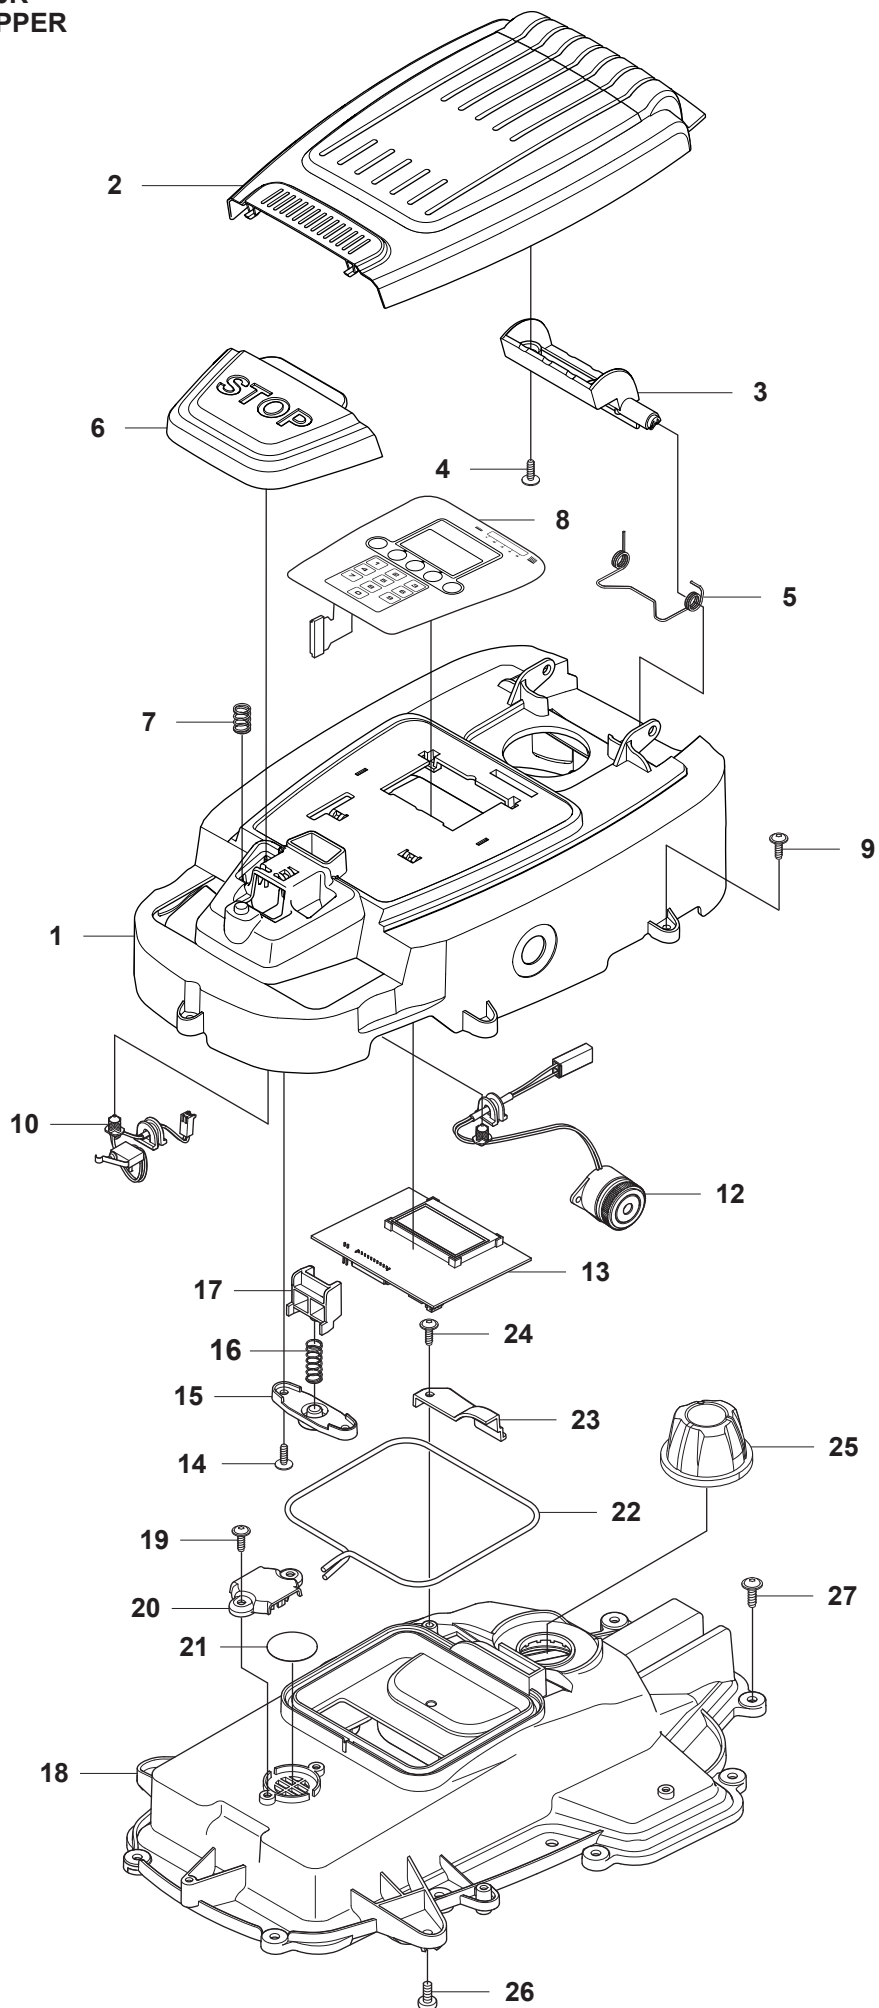

PAGE B FLYMO 1200R CHASSIS UPPER

Position	Article	Quantity	Notes	Kit
1	579 39 19-02	1	Display cover kit incl. sealing & keyboard	
2	577 70 72 01	1	Cover, height adjustment	
3	577 70 78 01	1	Hinge, height adjustment lid	
4	575 54 33-14	2	Screw, grey (14mm)	
5	578 44 52-01	1	Spring, height adjustment lid	
6	577 70 66-01	1	Stop button	
7	574 48 70-01	1	Spring, stop button	
8	581 61 76-01	1	Keyboard	1
9	575 54 33-14	5	Screw, grey (14mm)	
10	574 48 03-01	1	Micro switch, stop button	
12	574 47 59-01	1	Buzzer, display cover	
13	575 64 01-01	1	Display/MMI, circuit board	
14	575 54 33-14	2	Screw, grey (14mm)	
15	575 41 58-01	1	Spring holder, stop button	
16	576 24 22-01	1	Spring lock, stop button	
17	575 40 90-01	1	Lock, stop button	
18	579 39 20-01	1	Chassis upper kit incl. sealing & air filter	
19	575 54 33-14	2	Screw, grey (14mm)	
20	576 69 70-01	1	Cover, air filter	
21	577 75 37-01	1	Air filter kit (10 pcs)	
22	577 75 36-01	1	Sealing strip kit (10 pcs)	
22	574 87 47-04	1	Sealing strip	
23	576 05 39-01	1	Cover, height indicator	
24	575 54 33-14	1	Screw, grey (14mm)	
25	579 39 22-01	1	Knob, height adjustment kit incl. Knob & sticker	
26	576 21 39-01	2	Screw	
27	574 45 01-01	10	Screw	


C FLYMO 1200R CHASSIS LOWER

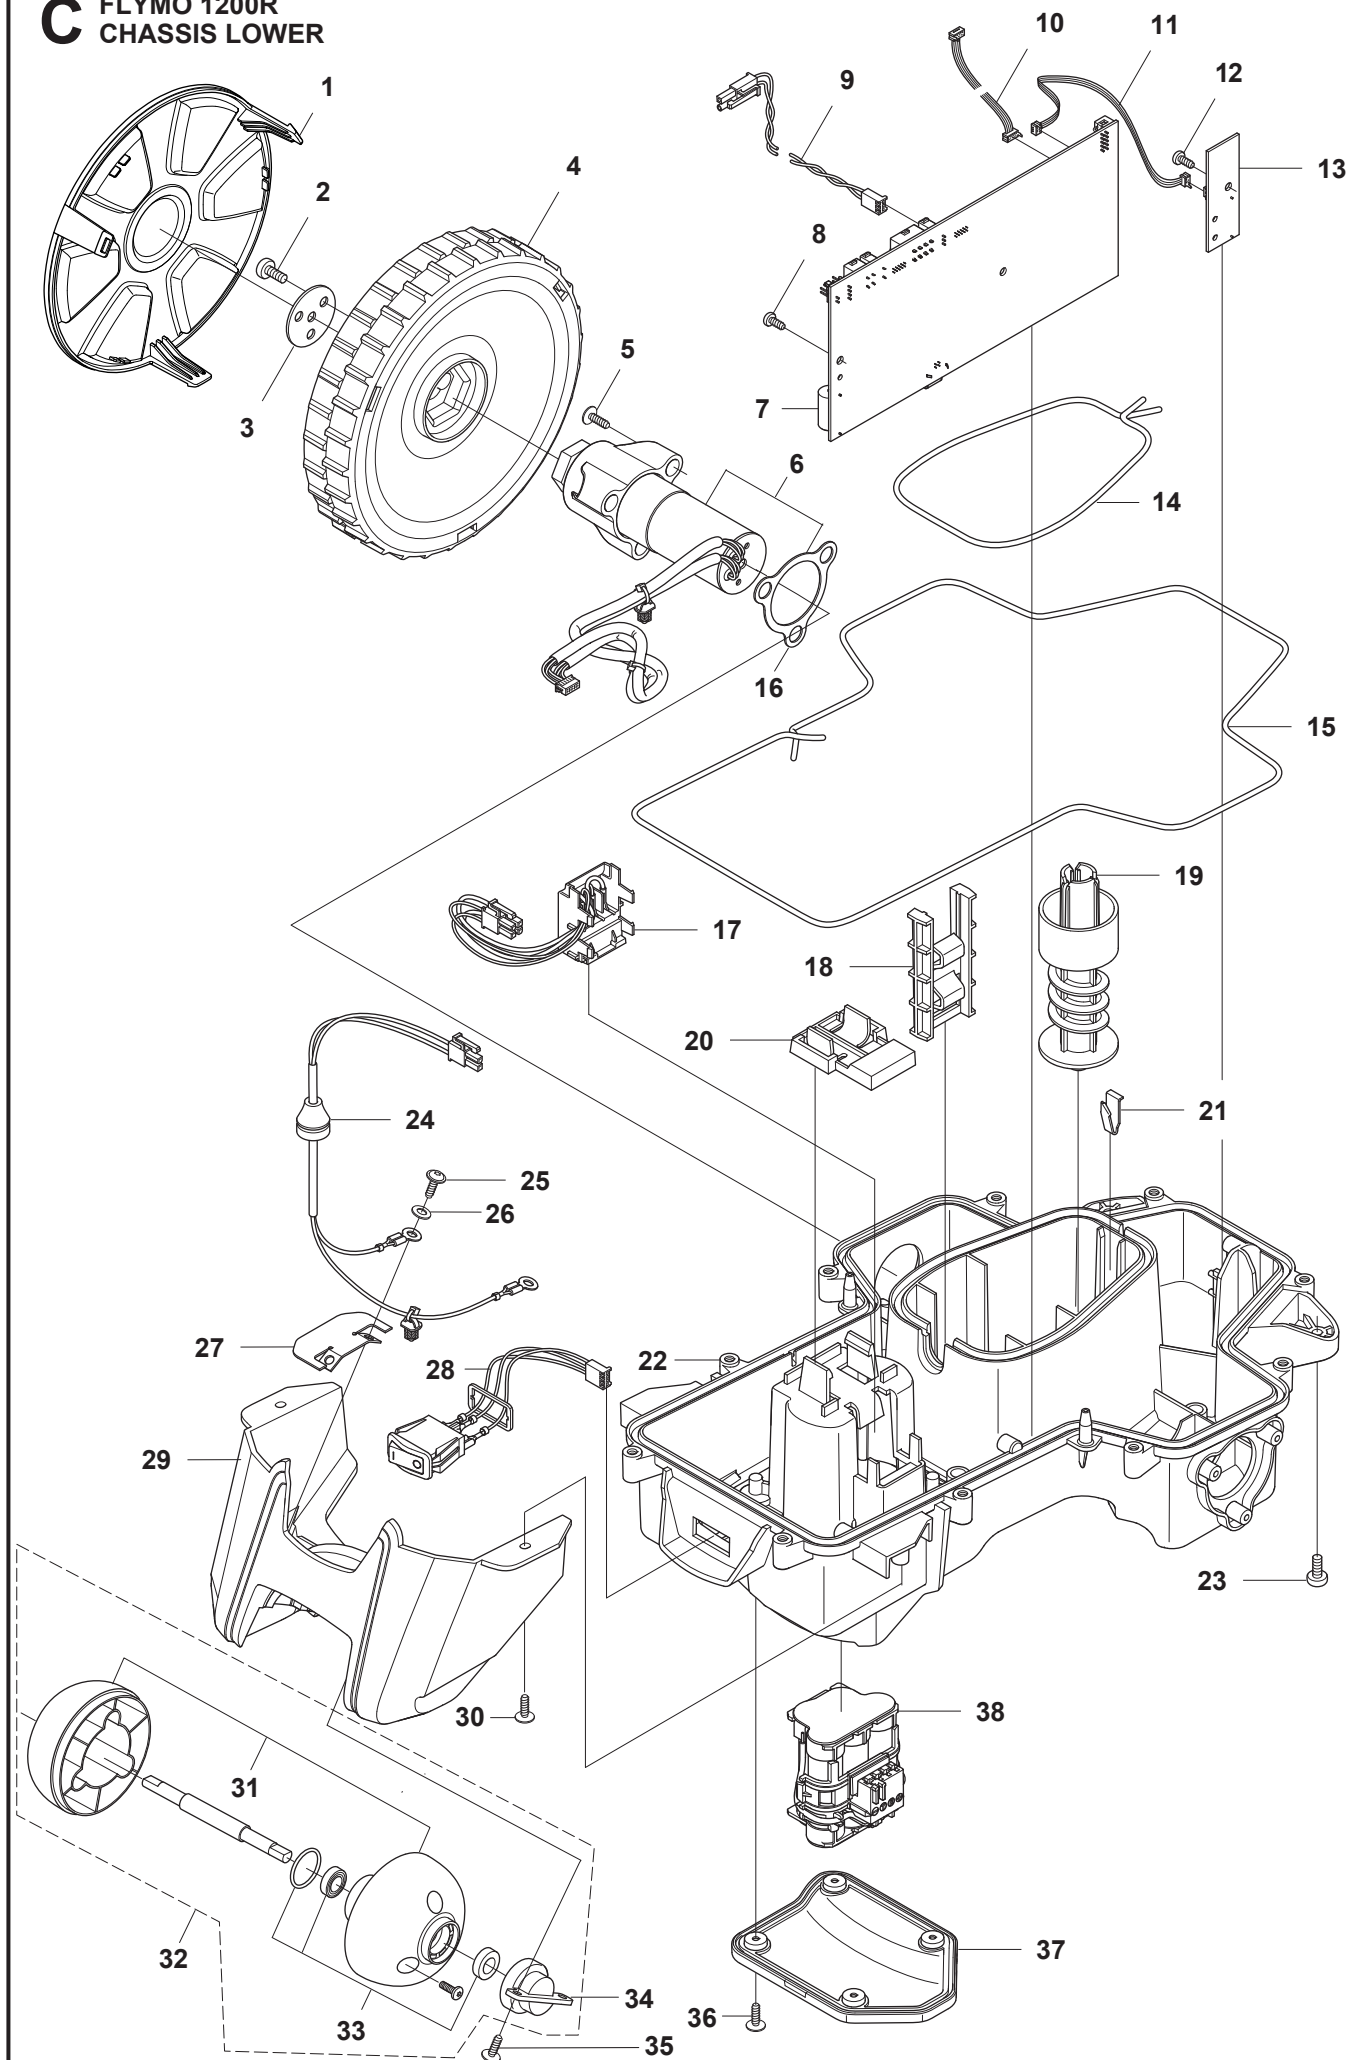

PAGE C FLYMO 1200R CHASSIS LOWER

Position	Article	Quantity	Notes	Kit
1	577 70 79-01	2	Hub cap, drive wheel	
2	576 21 39-02	6	Screw	
3	577 09 32-01	2	Washer, drive wheel	
4	574 46 51-01	2	Wheel, drive wheel	
5	575 54 33-14	6	Screw, grey (14mm)	
6	577 83 99-02	2	Wheel motor kit incl. sealing	
7	575 64 05-01	1	Main circuit board (MCB)	
8	535 13 03-10	2	Screw (10mm)	
9	576 22 02-01	1	Loom, buzzer extension	
10	574 47 92-01	1	Loom, display	
11	574 47 90-01	1	Loom, loop and lift sensor	
12	535 13 03-10	1	Screw (10mm)	
13	575 64 09-01	1	PCB sensor board	
14	577 75 36-01	1	Sealing strip kit (10 pcs)	
14	574 87 47-04	1	Sealing strip	
15	577 84 36-01	1	Sealing strip kit, chassis (10 pcs)	
15	574 87 47-03	1	Sealing strip, chassis	
16	574 37 37-01	2	Sealing/gasket, motor flange	6
17	574 47 98-01	1	Loom, Li-Ion battery	
18	574 50 19-01	2	Guide rail, motor bowl	
19	574 48 46-01	1	Height adjustment screw	
20	575 40 82-01	1	Lock, battery plug	
21	577 10 32-01	1	Locking spring	
22	577 84 62-01	1	Chassis lower kit, incl sealing	
23	576 21 39-01	2	Screw	
24	574 47 77-02	1	Loom, charge plate	
25	575 54 33-14	2	Screw, grey (14mm)	
26	535 08 74-01	2	Washer, vulcanized fiber	
27	574 49 00-01	2	Charge plate	
28	579 70 87-01	1	Swith ON/OFF with Seal	
29	574 46 72-01	1	Housing, rear wheel	
30	575 54 33-14	3	Screw, grey (14mm)	
31	583 85 39-01	1	Rear wheel kit	32
32	578 27 51-01	1	Rear wheel kit complete	
33	578 27 52-01	1	Bearing (x2), sealing (x2), O-ring (x1)	32
34	577 71 50-01	2	Bearing housing, rear wheel	32
35	575 54 33-14	4	Screw, grey (14mm)	
36	574 45 01-01	4	Screw	
37	574 46 73-01	1	Cover, battery	
38	574 47 68-01	1	Battery, Lithium 18V	


D FLYMO 1200R
BLADE MOTOR & CUTTING EQUIPMENT

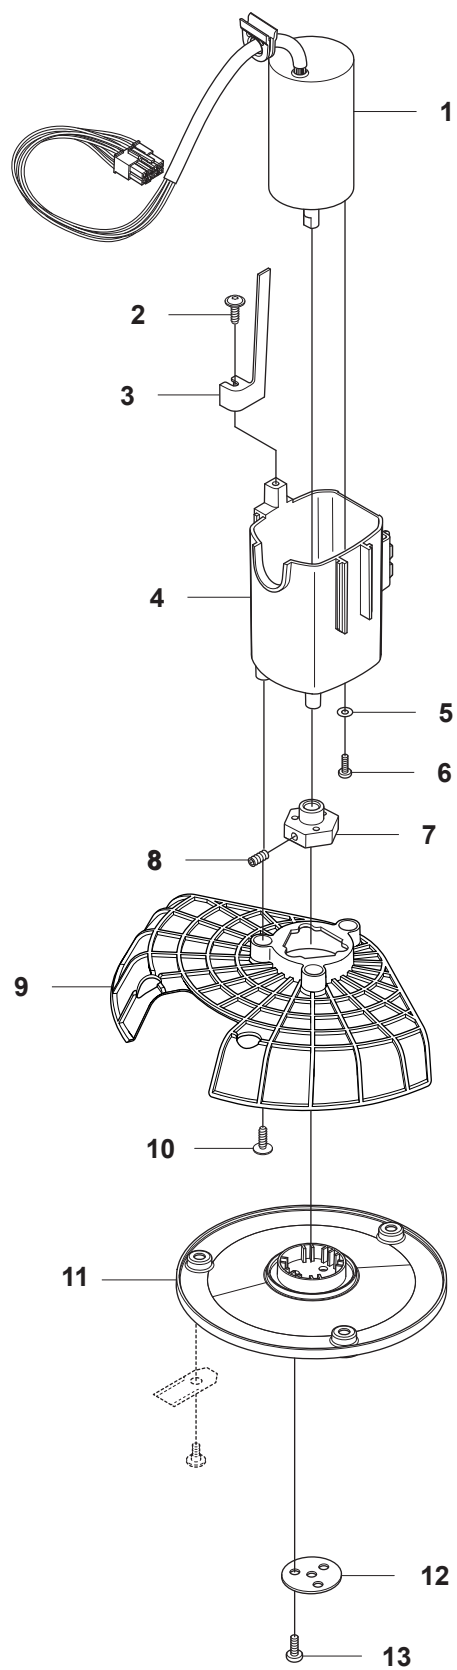

PAGE D FLYMO 1200R BLADE MOTOR & CUTTING EQUIPMENT

Position	Article	Quantity	Notes	Kit
1	574 46 89-01	1	Cutting motor	
2	575 54 33-14	1	Screw, grey (14mm)	
3	574 50 35-01	1	Height indicator	
4	574 48 45-01	1	Motor housing	
5	510 01 95-01	3	Washer, steel	
6	510 01 87-02	3	Screw M3x12	
7	574 37 35-01	1	Hub, cutting motor	
8	576 21 35-01	1	Stop screw	
9	577 85 02-01	1	Guard, cutting disc	
10	575 54 33-14	3	Screw, grey (14mm)	
11	574 48 71-01	1	Cutting disc	
12	577 09 32-01	1	Washer	
13	576 21 38-01	3	Screw	














E FLYMO 1200R CHARGING SYSTEM

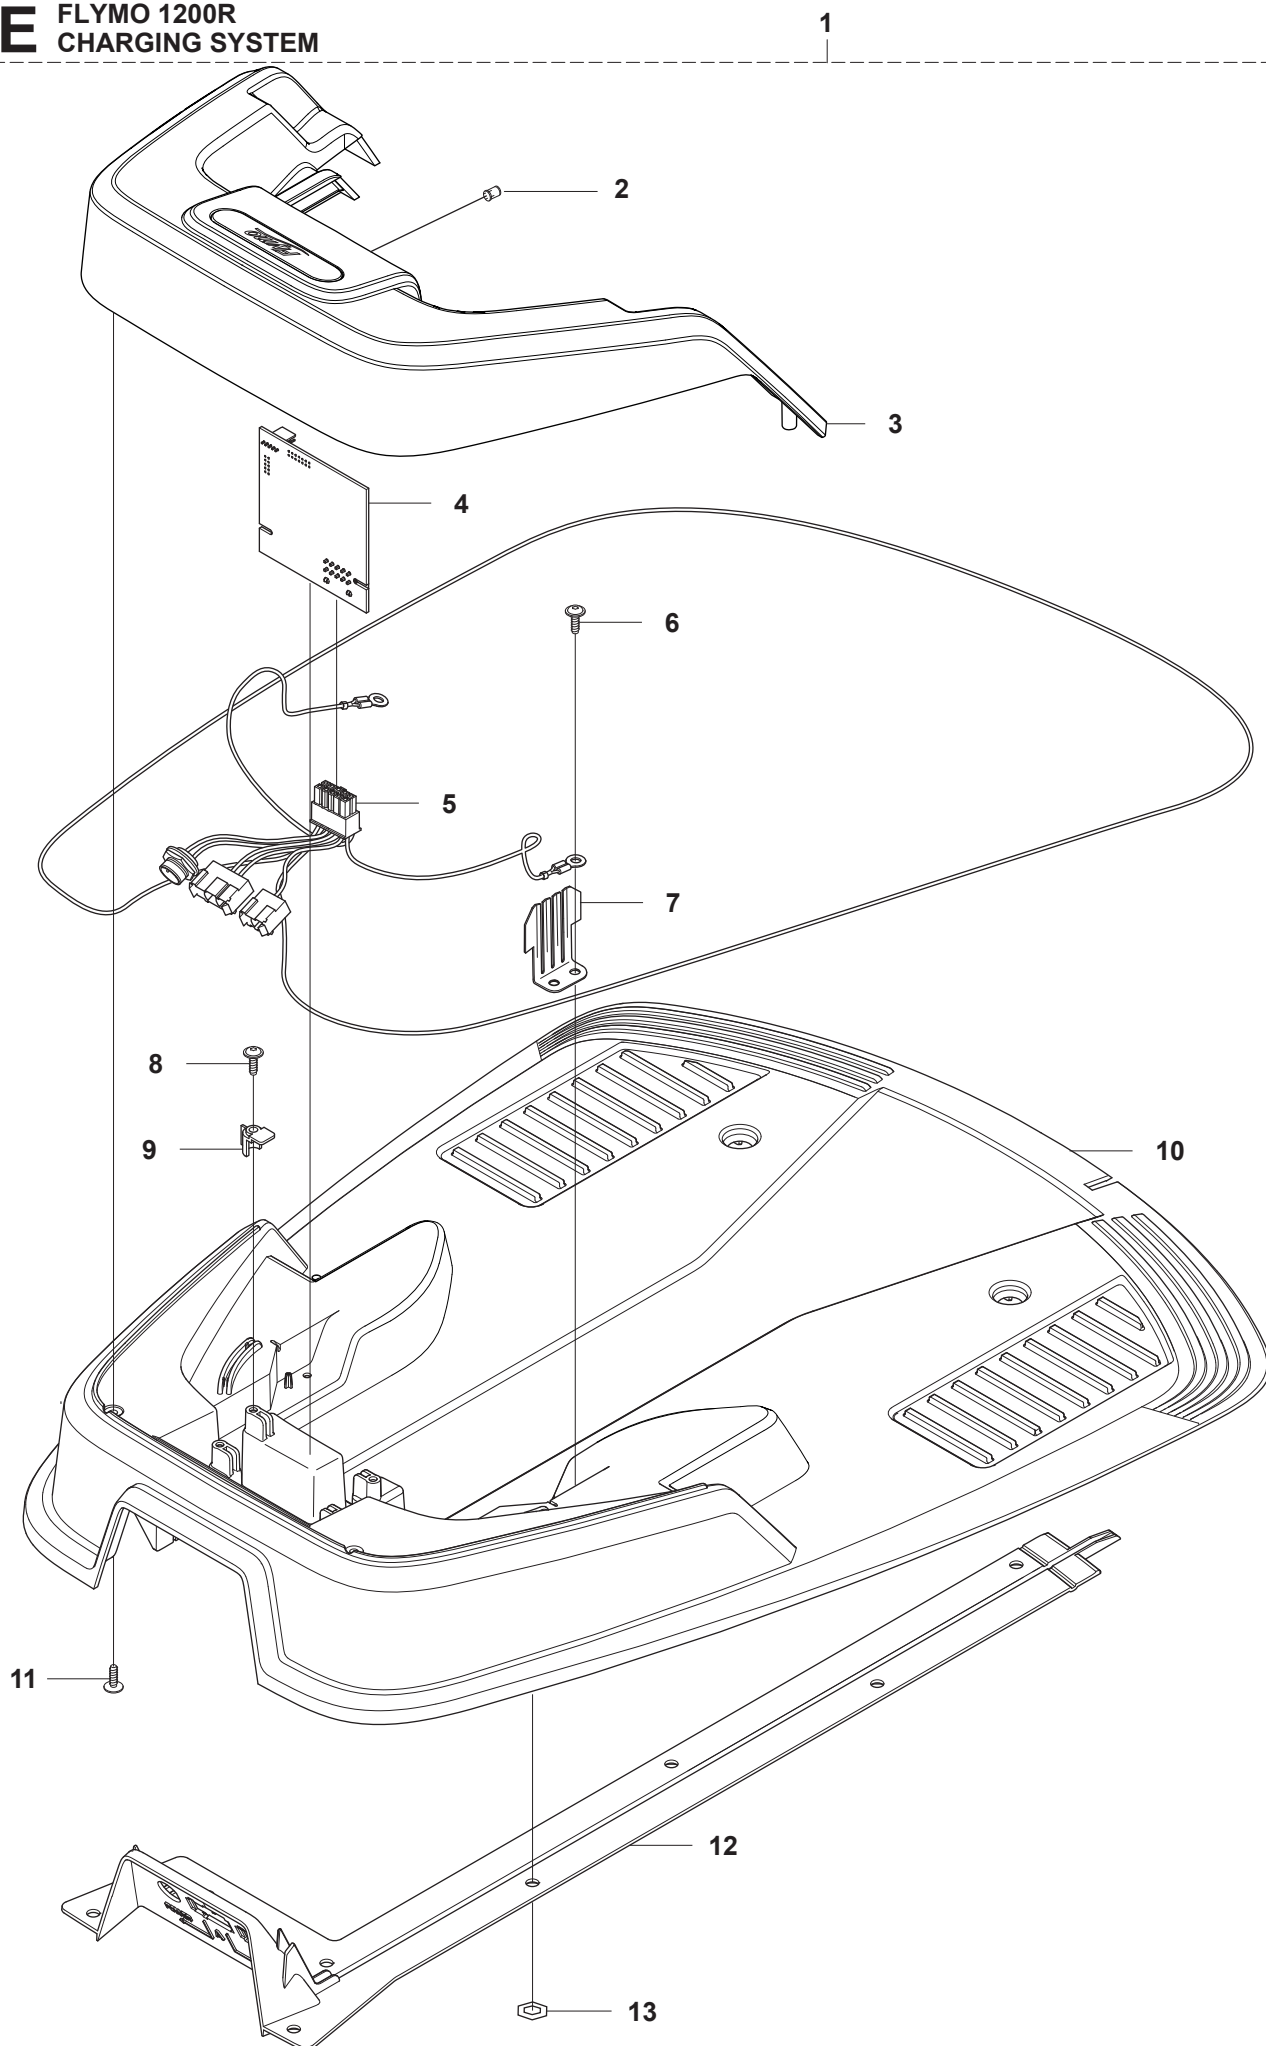

PAGE E FLYMO 1200R CHARGING STATION

Position	Article	Quantity	Notes	Kit
1	577 97 23-04	1	Charging station, Flymo	
2	535 12 87-02	1	Diode lens	3
3	579 39 23-02	1	Charging station cover, Flymo	1
4	576 24 26-01	1	Circuit board, charging station	1
5	574 47 65-02	1	Loom, charging station	1
6	575 54 33-14	2	Screw, grey (14mm)	1
7	575 85 00-01	2	Contacts, charging station	1
8	575 54 33-14	2	Screw, grey (14mm)	1
9	535 12 79-01	2	Bracket	1
10	575 70 83-02	1	Charging station base plate	1
11	575 54 33-14	4	Screw, grey (14mm)	1
12	575 70 85-01	1	Guide cover, charging station	1
13	577 51 22-01	19	Nut, self-tapping	1


F FLYMO 1200R ACCESSORIES

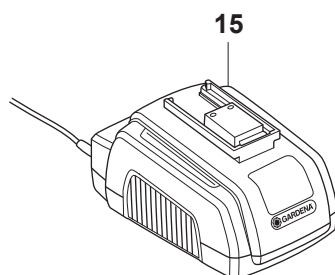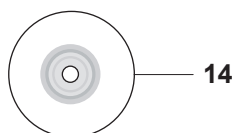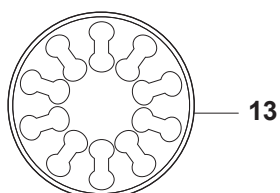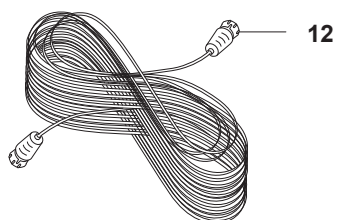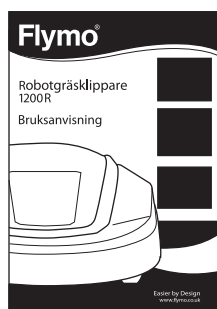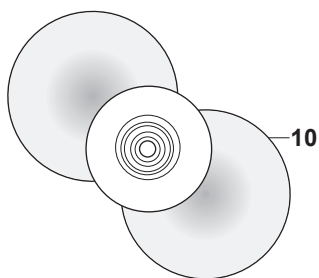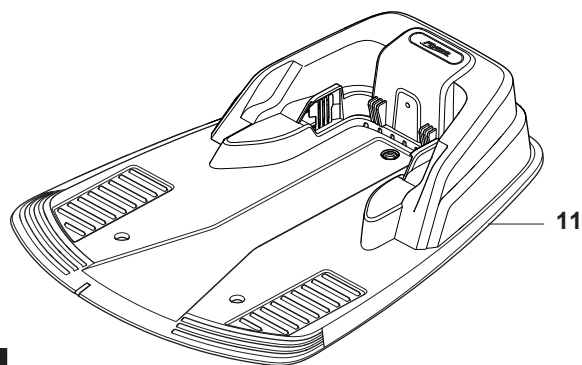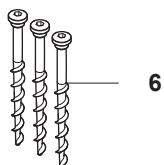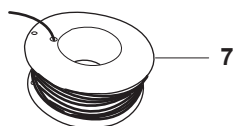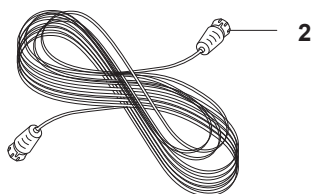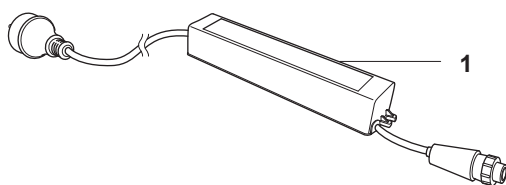

30

31

16

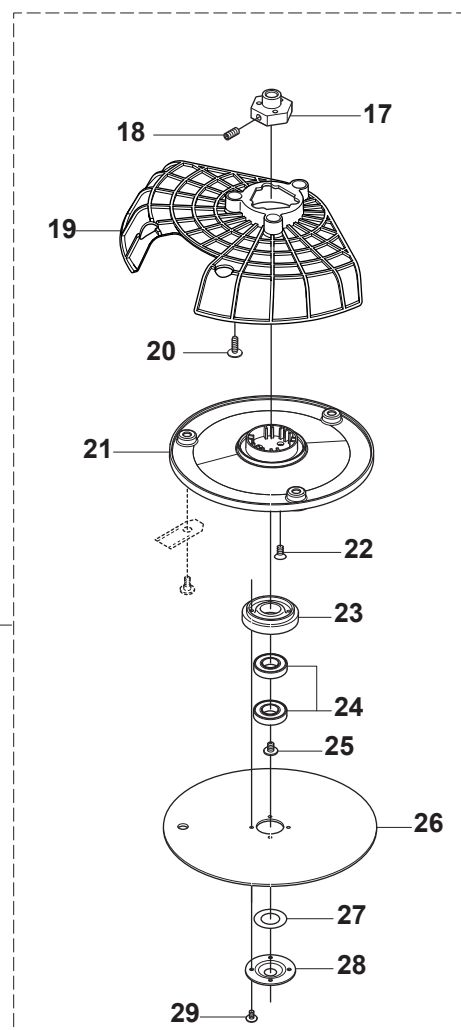

PAGE F FLYMO 1200R ACCESSORIES

Position	Article	Quantity	Notes	Kit
1	578 90 69-02	1	Transformer, UK	
2	577 23 35-01	1	Transformer cable (10 m)	
3	535 12 90-01	1	Loop wire connector (1pcs)	
4	501 98 02-01	1	Splice kit (1pcs)	
4	501 98 02-02	1	Splice kit (50pcs)	
5	504 04 97-01	1	Staples (100pcs)	
6	575 23 86-02	1	Anchor screw (3pcs) incl. Allen key	
7	501 98 03-02	1	Loop wire (150m)	
7	580 66 20-03	1	Loop wire (200m)	
7	501 98 03-01	1	Loop wire (250m)	
8	535 13 16-01	1	Label, anti-theft	
9	535 13 87-02	1	Blades (9pcs)	
9	535 13 88-02	1	Blades (30pcs)	
10	581 83 65-01	1	Installation DVD, Flymo	
11	577 97 23-04	1	Charging station, Flymo	
12	577 23 35-02	1	Transformer cable (20 m)	
13	581 84 28-01	1	Sticker, Cable markers	
14	577 85 81-02	1	Autocheck EXP - Service program DVD	
15	966 41 01-01	1	Quick charger	
16	584 97 34-01	1	Skid plate kit	
17	580 79 31-01	1	Hub, cutting motor	18
18	576 21 35-01	1	Stop screw	18
19	577 85 02-02	1	Guard, cutting disc	18
20	575 54 33-14	3	Screw, grey (14mm)	18
21	580 79 28-01	1	Cutting disc	18
22	535 13 05-01	3	Screw	18
23	535 12 64-01	1	Bearing box	18
24	535 07 57-02	1	Ball bearing	18
25	535 07 60-01	1	Screw	18
26	580 79 27-01	1	Skid plate	18
27	535 08 25-01	1	Gasket	18
28	535 08 15-01	1	Cover washer	18
29	575 54 33-10	4	Screw	18
30		1	Operators manual	
31		1	Quick guide	